

Under Mezzanine - Heat Control

Set Up:

The Electric Boiler is on permanently (unless switched off in the summer) but not always producing hot water, this is controlled by the thermostat.

Timer/Controller is set to permanently "on" -

Thermostat - this controls the on/off of the boiler to produce hot water for the radiators under the following circumstances:

[image-1701703041766.jpg](#)

1. Too hot - switches boiler off
2. Too cold - switches the boiler off
3. Time of day to switch off
4. Time of day to switch on
5. Days to switch on
6. Days to switch off.

PROGRAMMING THE THERMOSTAT

To control when the area is to be heated the Thermostat must be programmed.

[Flomasta Programmable thermostat.pdf](#)

Video:

Overview of programmable thermostats:

<https://www.youtube.com/watch?v=O3ECpfj-ZWU>

Revision #2

Created 4 December 2023 14:55:55 by Richard McCombe

Updated 4 December 2023 15:24:03 by Richard McCombe