

# Under Mezzanine - Heat Control

## Set Up:

The Electric Boiler is on permanently (unless switched off in the summer) but not always producing hot water, this is controlled by the thermostat.

Timer/Controller is set to permanently "on" -

Thermostat - this controls the on/off of the boiler to produce hot water for the radiators under the following circumstances:

[image-1701703041766.jpg](#)

1. Too hot - switches boiler off
2. Too cold - switches the boiler off
3. Time of day to switch off
4. Time of day to switch on
5. Days to switch on
6. Days to switch off.

## PROGRAMMING THE THERMOSTAT

To control when the area is to be heated the Thermostat must be programmed.

[Flomasta Programmable thermostat.pdf](#)

Video:

Overview of programmable thermostats:

<https://www.youtube.com/watch?v=O3ECpfj-ZWU>

---

Revision #2

Created 4 December 2023 14:55:55 by Richard McCombe

Updated 4 December 2023 15:24:03 by Richard McCombe