

Thread Keeps Snapping or Shredding

This is usually because the needle is blunt - Change the needle

Revision #2

Created 6 May 2022 07:40:20 by Admin

Updated 25 July 2023 08:52:21 by Lesley