Printer Won't Print (Desktop e.g. Xerox)

Error 041-341

Remove toner cartridges and ethernet cable. Turn off machine and turn back on after 45 seconds.

Error 016-748

You need to reinstall the firmware using Xerox Desktop Print Experience to the latest firmware.


Other Troubleshooting

If you try and trouble shoot you'll get an error like below.

You'll have to ask Robert for the new IP address.

Then you can follow the video below to update ip address to new address.

https://www.youtube.com/embed/YcNETLD4Xto

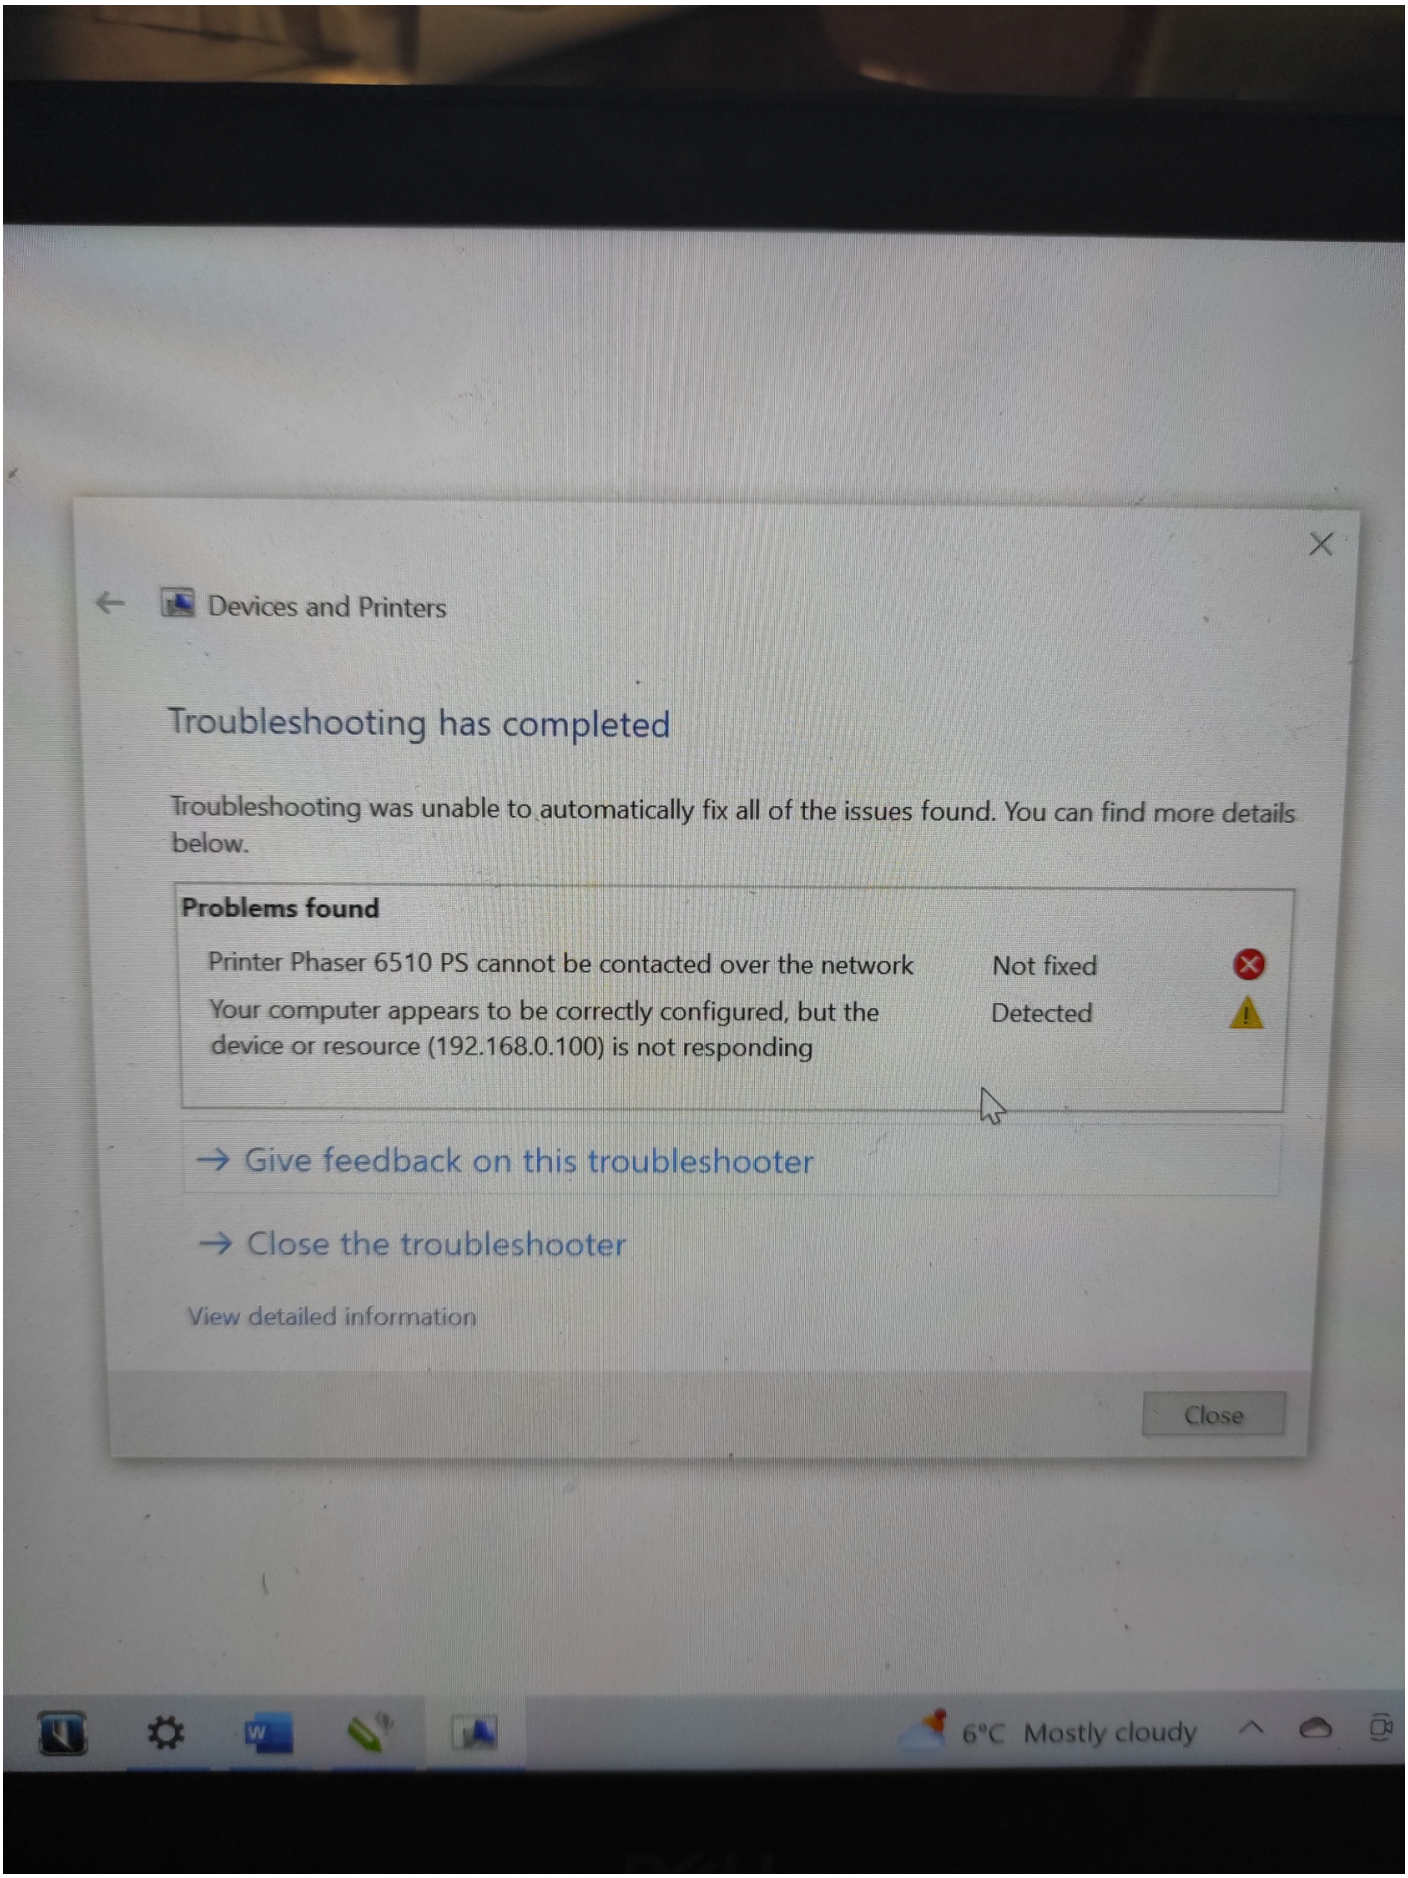

Revision #4
Created 11 January 2023 11:45:23 by Admin
Updated 18 December 2024 16:33:17 by Admin