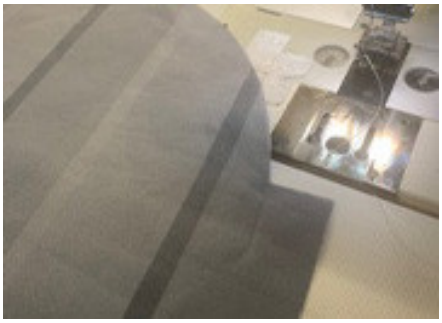
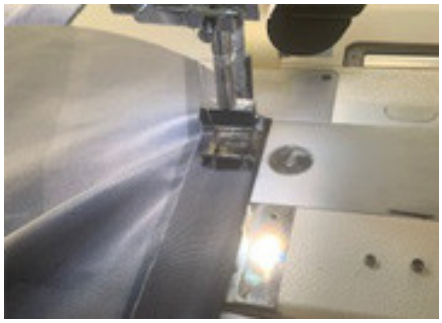
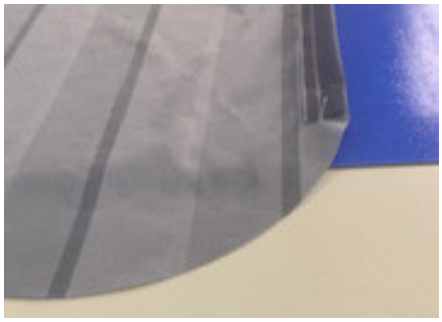
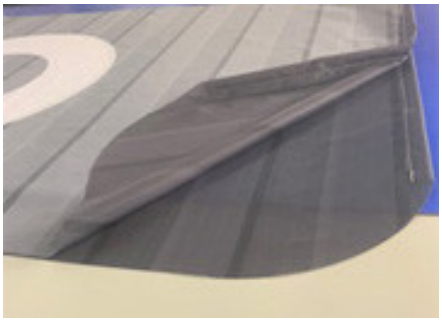
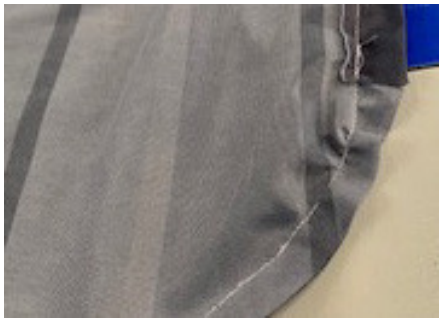
Sewing a Barrier Jacket

		
The finished barrier jacket should look like this.	Spread the material out - with the wrong side facing up.	Fold the flaps over on each side and stitch them from top to bottom,
		
Each side should look like this and you are now ready to sew the two sides together.	Put the 2 sides together with printed sides facing each other.	Start sewing at the right side of the jacket following the curve until you get to the opposite side.

Revision #3
Created 11 November 2022 09:58:21 by Lesley
Updated 16 November 2022 16:09:42 by Lesley