

# Mimaki UJV55-320

- [Overview](#)
- [Health and Safety](#)
- [Operation](#)
  - [Loading a Roll on the Feeding Unit to Print](#)
- [Errors & Fixes](#)
  - [SYSTEM HALT \(2\) 51f:CAP SENS](#)
- [Mimaki Long Term Shutdown](#)

# Overview

Find the operation manual: [D202964-15\\_UJV55-320\\_OperationManual\\_e.pdf \(mimaki.com\)](#)

[Mimaki\\_SIJ-320UV\\_Operation\\_Manual.pdf](#)

[Mimaki\\_SIJ-320UV\\_Service\\_Manual.pdf](#)

Serial Number: W468E179

# Health and Safety

# Operation


Operation

# Loading a Roll on the Feeding Unit to Print


Starting from the menu.



Select machine setup

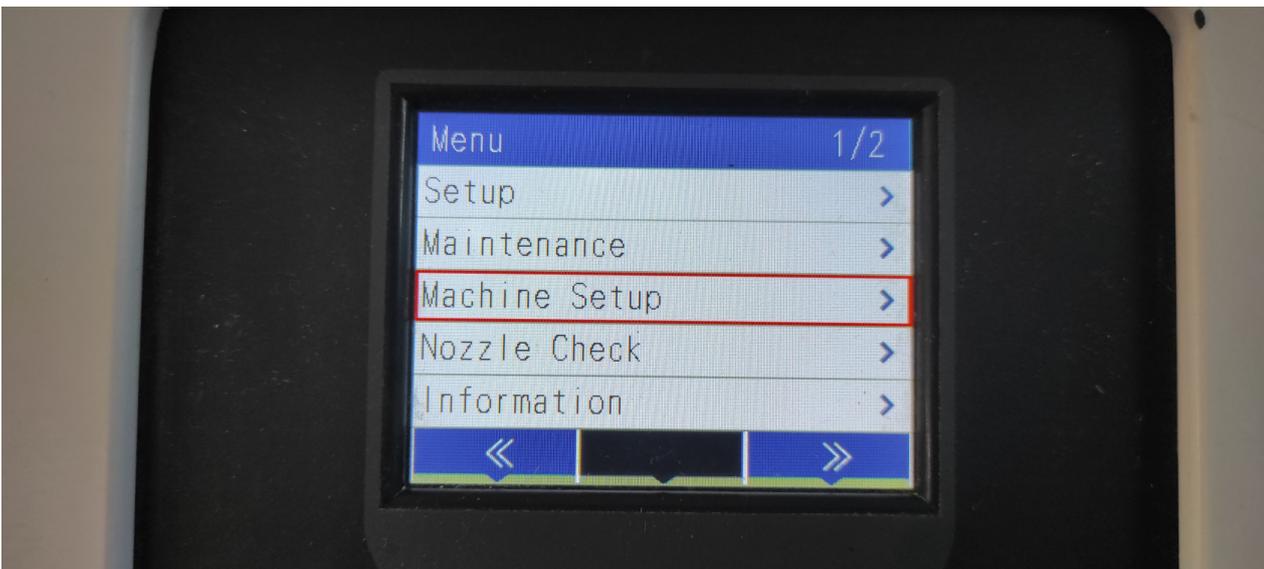

Turn on the feeding unit.

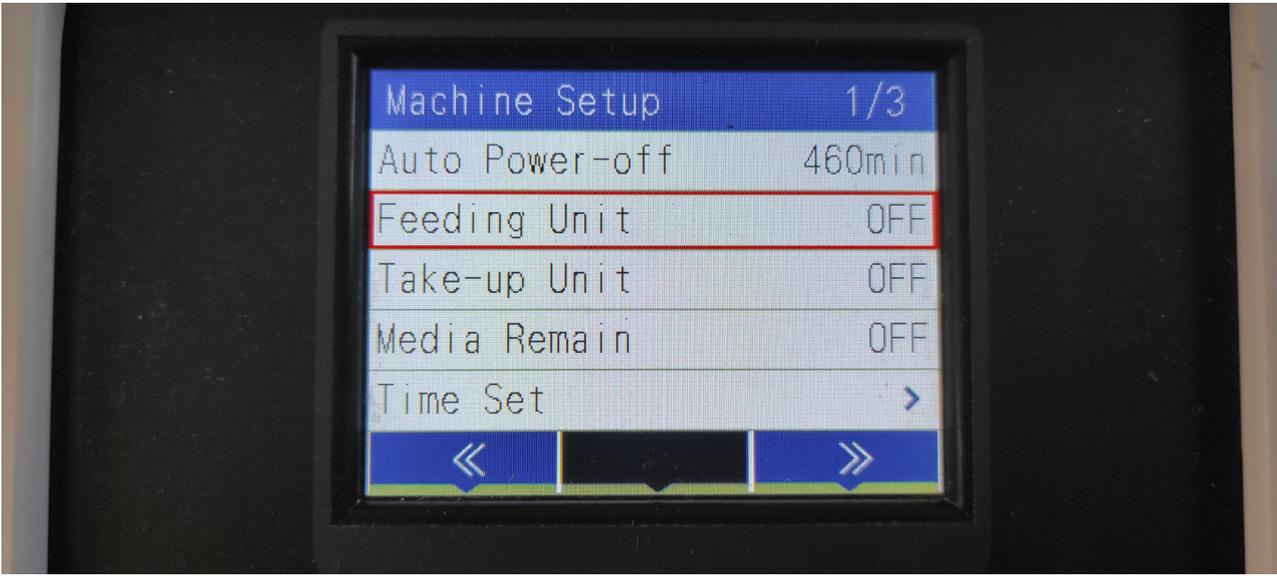

If the error 428 feeding cover open appears, you'll need to go to the rear left to close it to go




Select Roll and select enter.



- Select Enter



- Place the Media Press to the outside as a preparation.

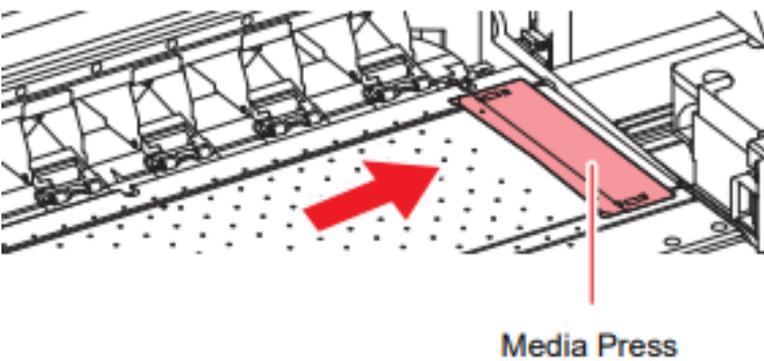


- To begin loading a roll, start by opening the rear covers on the back by pulling at the bottom.



- Then unclip the feeding cover on the feeding unit [rear side of the printer]




- Lift the feeding unit out one side at a time [easier with 2 people].
- If there is already media on the unit then it will need to be slid down one side and put back into the stock storage.
- Take the roll of media you wish to use and slide it down the feeding unit to sit in the middle of the media feed area. [this can be roughly in the middle, using a measuring tape can help].
- Push the Roll Guide onto each end of the media to secure it in place.

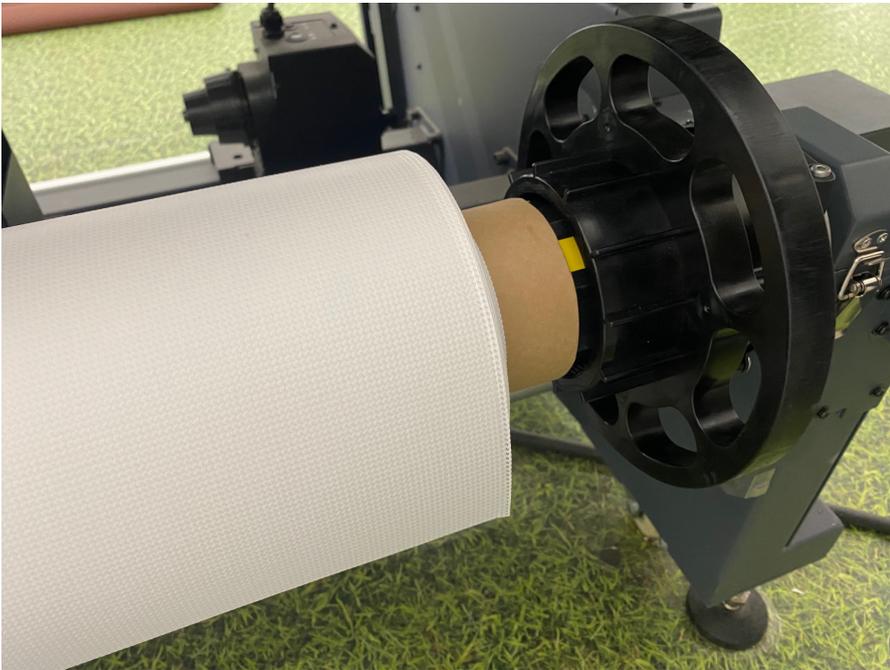

- Place the feeding unit back onto the roll resting spot on either side, before then slotting the side with the feeding cover into the gears.
- Once the feeding unit is secured in place with the feeding cover clipped down, you can begin to feed the media down under the tension bar and back up into the pinch rollers, using the auto button and forward button as long as you need to get it into position on the platen.



- You can use the pinch rollers to grab the media whilst you go around to the front of the Mimaki to hold the media and use the grey lever on the front to release if you need to adjust it.

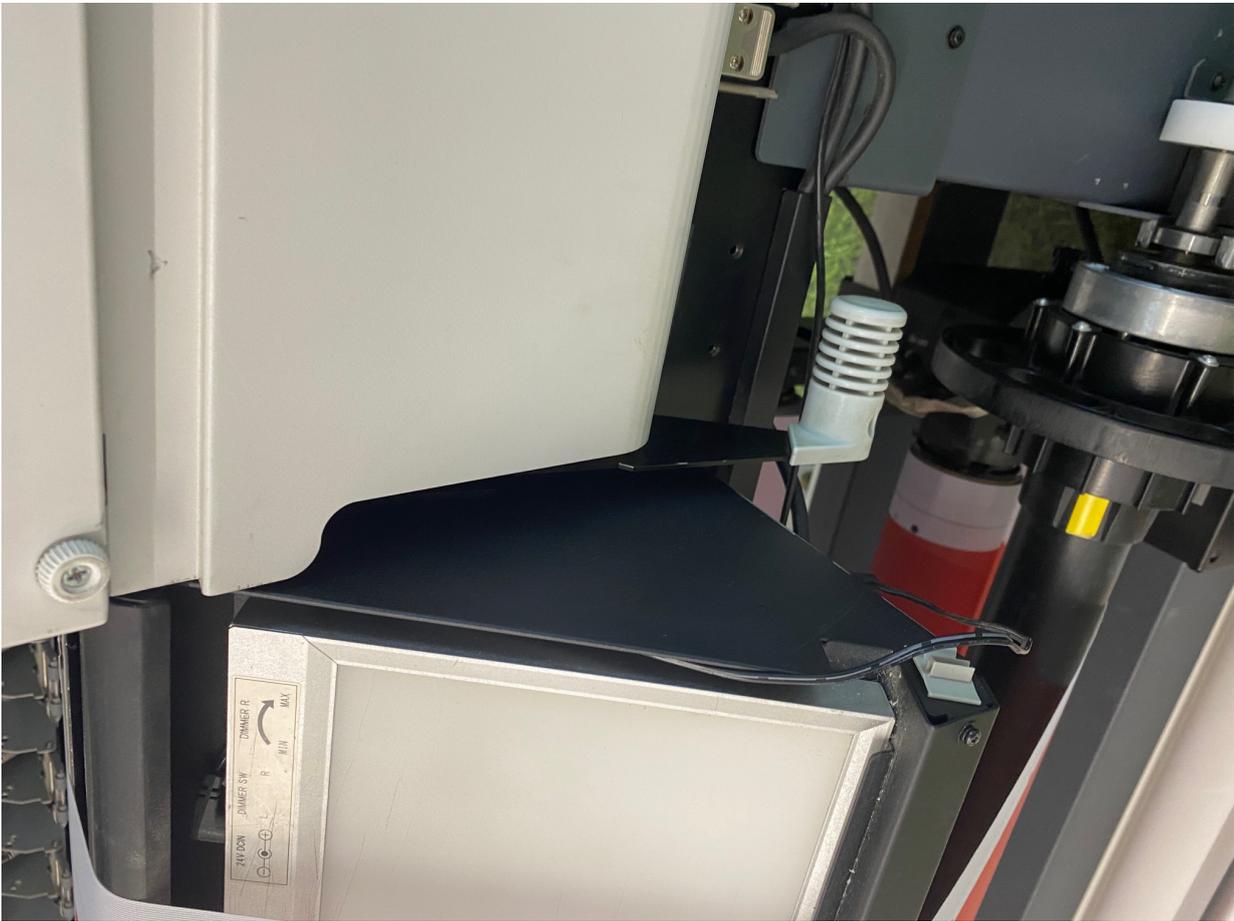

- Using the arrows on the display, you can move the feed-forward to secure it to the tension bar [silver] on the front which can be lifted up so you use less material to set it up. [Some materials you can start printing first before this process is started, to use less material.]



- Then attach it to the take-up unit [black] at the front using masking tape to keep the tension tight.




- Adjust the head height and jam sensor heights depending on the material.

# Adjusting the Head Height and Jam sensor Height

Adjust the head height and Jam sensor height according to the thickness of the media you use.

## 1 Move the carriage to the platen.

- (1) Press the [SEL] key twice on the Local machine to display (HEAD HEIGHT) on [FUC3]
- (2) Press [FUC3] (HEAD HEIGHT) key.
- (3) Press [ENTER] key.

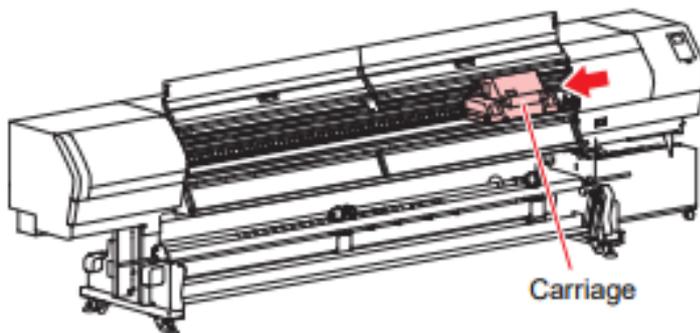


## 2 Adjust the height-adjusting lever according to the media.

- Adjust the position of the lever, referring to P.2-4 "For the Adjusting Lever and the Range".
- Set the head height-adjusting lever to the highest stage or the lowest stage. Setting it to the intermediate height, a printing fault can result.
- Adjust the jam sensor height-lever to the same position as the head height adjustment lever.

**Important!**

- Do not adjust the height-adjusting lever when the print head is capped. Doing so may damage the machine.

Head height-adjusting lever

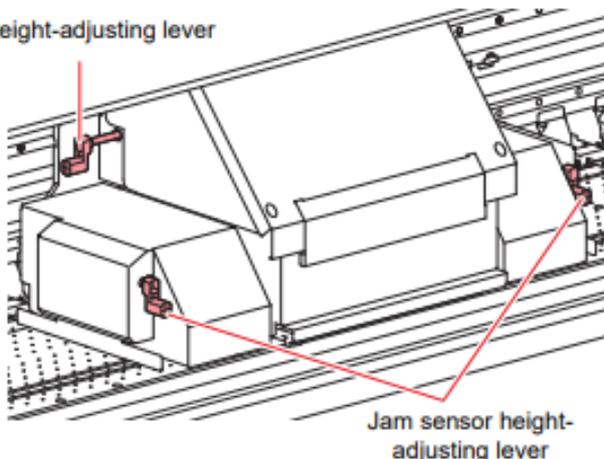

### 3 Return the carriage to the station position.

## For the Adjusting Lever and the Range

Lever position	Distance between platen and head	Recommended media
Vinyl Standard	1.7mm	0.3mm or less (PVC film)
Banner Standard	1.9mm	0.5mm or less (Tarpaulins, FF)
High	2.6mm	Used, depending on the situation including a wavy media or the occurrence of cockling.
MAX	3.3mm	



• Please raise the lever when the media is prone to gather dust in the head or is often stained with ink traces.




**In the following cases, perform P.2-25 "Correct the ink drop position for bidirectional printing".**

- The lever position is changed.
- The head height is not changed, but the media thickness is changed.

Correct the media feed amount to match the type of media you are using. If the correction value is not appropriate, stripes may appear on the printed image, thus resulting in a poor print.


- Set a media.
- Press the func1 (MENU) key in Local.
- Press down or up to select SETUP 1 to 4, and press the enter key.
- Setup menu appears.
- Press down or up to select "Feed Comp." and press the enter key.
- Press down or up to enter resolution.
- Here enter the resolution in the scanning direction (Y direction) of the media.
- Press enter key twice to print the correction pattern.
- Check the correction pattern and enter a correction value.
- A screen for entering the correction value appears.
- Enter a correction value in "+": The boundary between the two bands is widened.
- Enter a correction value in "-": The boundary between the two bands is narrowed.
- When you change the correction value by "25", the width of the boundary changes by about 0.1mm.
- Press the enter key.
- Print a correction pattern again and check it.
- Press the end/power key several times to end the setting

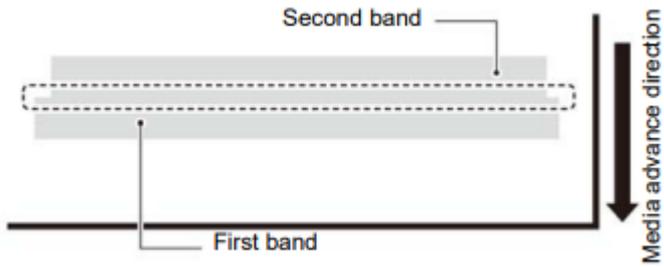


- You can begin a test print before printing by selecting Test Print on the Operation panel.
- Once you've loaded your file on the RIP software, select Local - Menu




Select Setup

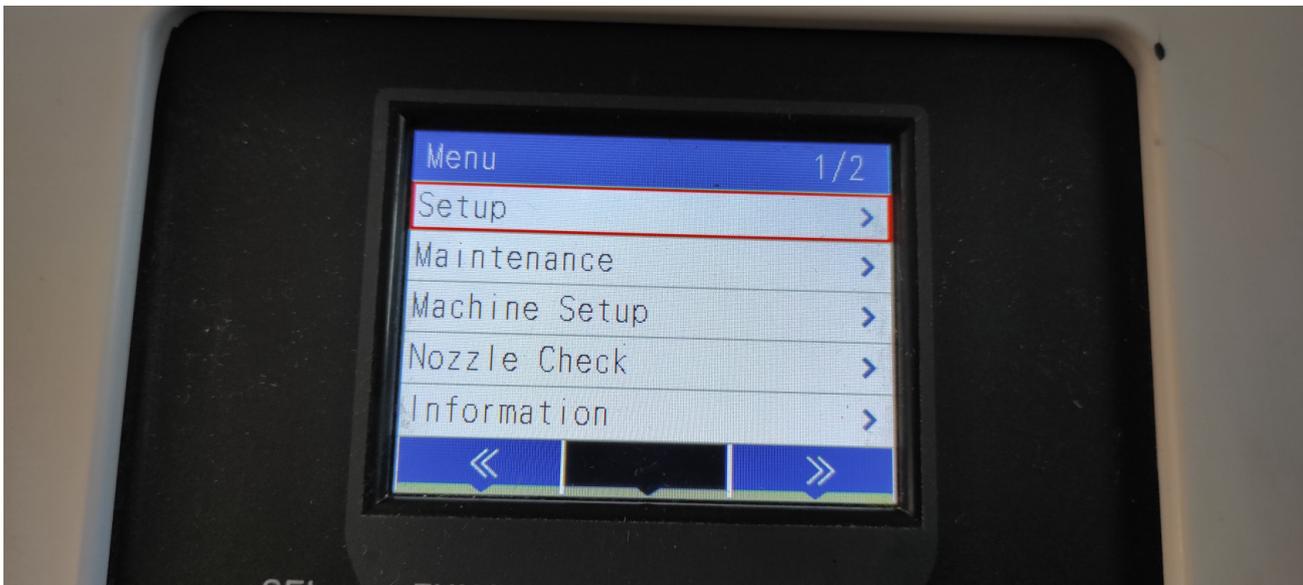


Select Feed Comp

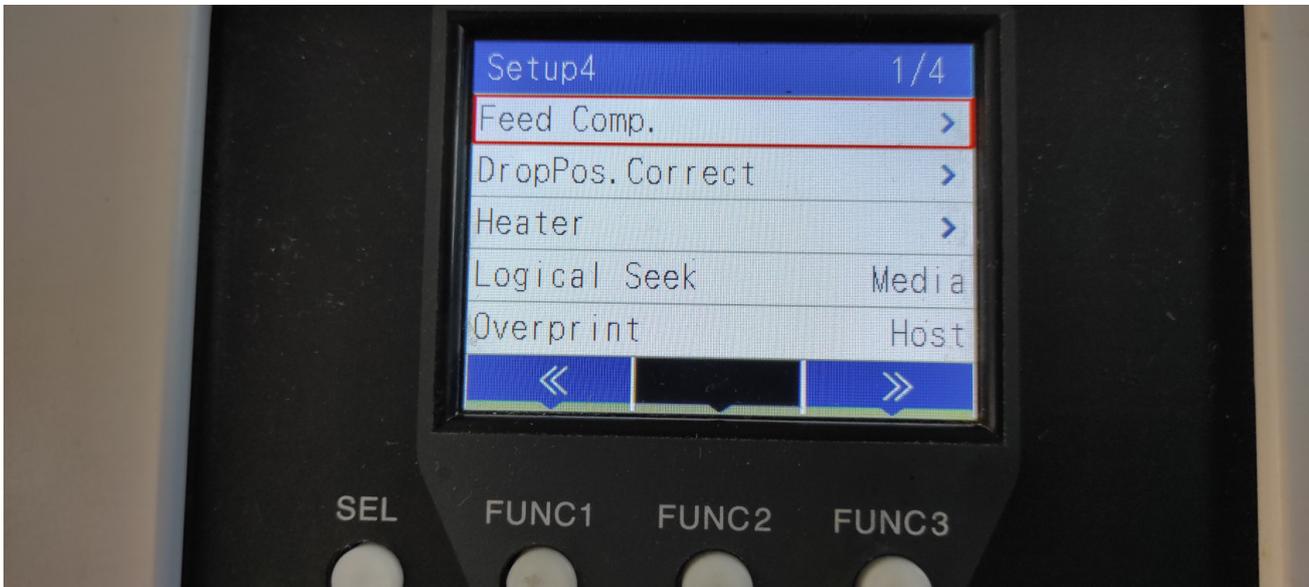

Select Resolution

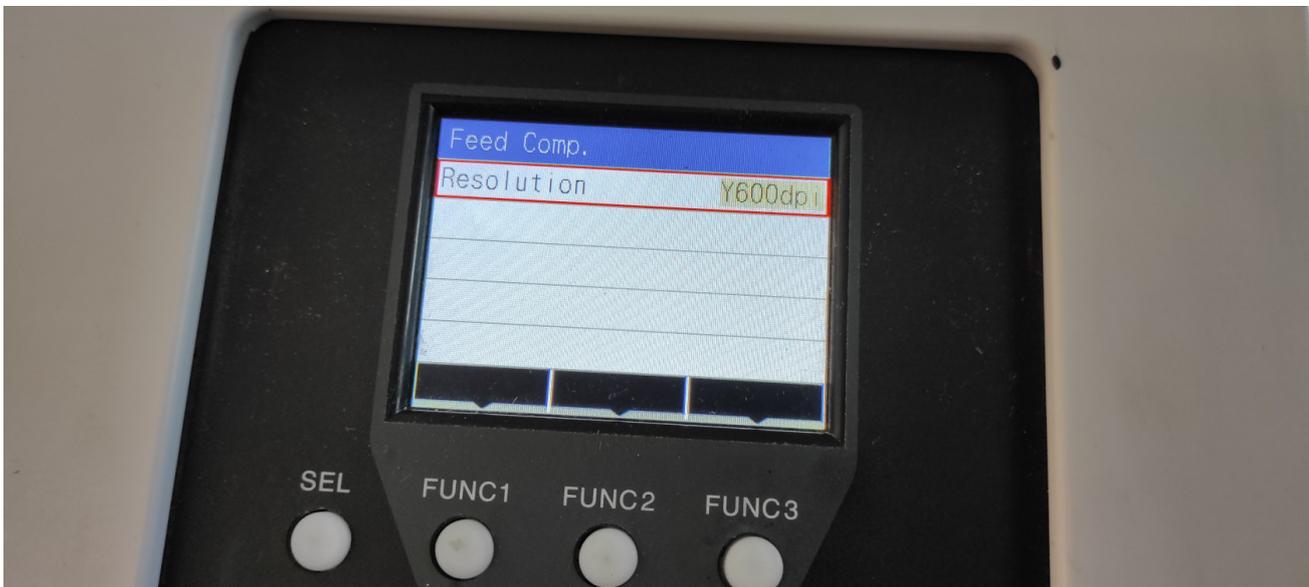

Select Print Start - Hit Enter

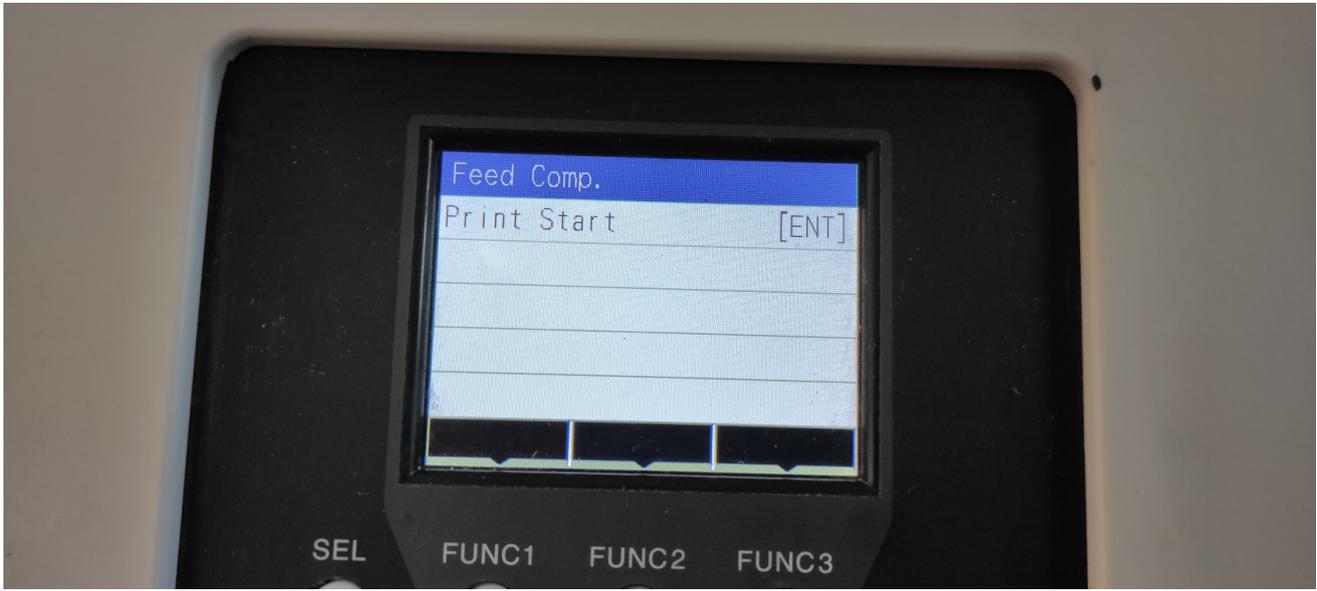

# Errors & Fixes

A list of errors and fixes

# SYSTEM HALT (2) 51f:CAP SENS

## SYSTEM HALT (2)

### 51f:CAP SENS

[image-1698072700795.jpg](#)

Image not found or type unknown

To solve this issue, you may need Bike Grease (as below)

[image-1698072672776.png](#)

Image not found or type unknown

Apply dots of bike grease along the carriage rails.

[image-1698072853773.png](#)

Image not found or type unknown

Slide the carriage out of the station back and forth to spread the grease along the rails.

[image-1698072983455.png](#)

Image not found or type unknown



# Mimaki Long Term Shutdown

[https://mimaki.com/archives/034/202310/D202964-16\\_UJV55-320\\_OperationManual\\_e.pdf](https://mimaki.com/archives/034/202310/D202964-16_UJV55-320_OperationManual_e.pdf)

Section 4-10 (Page 93).

[image-1703237183669.png](#)

Image not found or type unknown